
levoit

USER MANUAL

Pedestal Air Circulator Fan

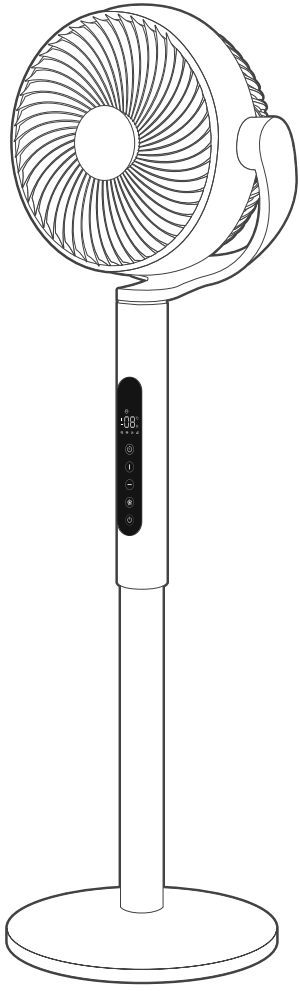

Questions or Concerns?

support.uk@levoit.com

Table of Contents

Package Contents	**2**
Specifications	**2**
Safety Information	**3**
Getting to Know Your Fan	**6**
Controls & Display	**7**
Remote Control	**7**
Getting Started	**8**
Using Your Fan	**10**
Care & Maintenance	**12**
Troubleshooting	**13**
Warranty Information	**14**
Customer Support	**15**

Package Contents

- **1 x** Fan Head
- **1 x** Base
- **1 x** Pole
- **1 x** Remote Control
- **1 x** Power Adapter
- **1 x** Quick Start Guide
- **1 x** User Manual

Specifications

Model	LPF-R432-WUK
Power Supply	24V⎓ 30W
Timer	1–12 hr
Max Speed	7.5 m/s
Noise Level	20–52dB
Dimensions	36.5 x 32.0 x 110.8 cm / 14.3 x 12.5 x 43.6 in
Weight	5.8 kg / 12.7 lb

Item	Symbol	Value	Unit
Maximum fan flow rate	F	27.1	m^3/min
Fan power input	P	28.9	W
Service value	SV	0.9	(m^3/min)/W
Standby power consumption	P_{SB}	0.2	W
Seasonal electricity consumption	Q	9.5	kWh/a
Fan sound power level	L_{WA}	61	dB(A)
Maximum air velocity	c	5.9	meters/sec
Measurement standard for service value	EN IEC 60879-2019 / EN 50564:2011 / EN IEC 60704-1:2021 / EN IEC 60704-2-7:2020		
Contact details for obtaining more information	VESYNC (SINGAPORE) PTE. LTD. 6 Raffles Quay, #14-06, 048580 Singapore		

Note:

- *61dB(A)Lw (sound power level) = 47dB(A)Lpm (the averaged sound pressure level).*
- *The maximum air velocity measured on the air outlet is 7.5m/s*
- *The fan flow rate is influenced by the type of anemometer used. During testing, ERP employs a 100 mm impeller anemometer while GTT utilizes a high-sensitivity thermal anemometer. As a result, the fan flow rate measured by ERP is 27.1 m^3/min and that measured by GTT is 41.1 m^3/min.*

READ AND SAVE THESE INSTRUCTIONS

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

General Safety

- **Only** use your fan as described in this manual. Any other use may cause a fire, electric shock, or personal injury.
- **Do not** use your fan outdoors.
- To protect against electric shock, **do not immerse the fan** cord, adapter, or housing in water or spray with liquids.
- Keep your fan away from water and wet or damp areas.
- **Do not** place the fan in a window.
- Keep your fan away from open flames, heat sources, or other heating and cooking appliances.
- **Do not** use where combustible gases, vapours, metallic dust, aerosol (spray) products, or fumes from industrial oil are present.
- **Do not** place anything into any opening on the fan.
- **Do not** use with any openings blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Avoid contact with moving fan parts.
- **Do not** hang or mount the fan on a wall or ceiling.
- **Only** use the fan on a dry and level surface.
- Close supervision is necessary when the fan is used by or near children.
- Children should be supervised to ensure that they **do not** play with the fan.
- Children should be supervised to ensure they **do not** insert fingers or objects into the vent openings.
- Children should not clean or perform maintenance on the fan without supervision.
- Unplug the fan when not in use for an extended period of time.
- **Do not** use third-party attachments or parts as replacement parts for this fan.
- **Do not** use your fan if it is damaged or not working correctly, or if the cord or adapter is damaged. **Do not** try to repair it yourself. Contact **Customer Support** (see page 15).
- **WARNING:** To reduce the risk of fire or electric shock, **do not** use this fan with any solid-state speed controls (such as a dimmer switch).
- Not for commercial or industrial use. Household use **only**.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- **Do not** operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- **Do not** run cord under carpeting. **Do not** cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- This fan can be used by children 8 years and older as well as persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the fan in a safe way and understand the hazards involved.

Power Adapter

- This device is **only** to be used with the power supply unit provided with the device.
- Turn off the fan before removing the adapter from the outlet. To unplug, grab the adapter and pull from the outlet. **Never** pull from the power cord.
- Keep the fan near the outlet it is plugged into. The use of an extension cord is not recommended.
- **Always** turn the fan off and unplug it when not in use and before moving, cleaning, or servicing the fan.
- Turn off and unplug the adapter when not in use for extended periods of time.
- **Never** place the cord near any heat source.
- **Do not** cover the cord with a rug, carpet, or other covering. **Do not** place the cord under furniture or appliances.
- To avoid a tripping hazard, keep the cord out of areas where people walk often. Place the cord where it will not be tripped over and safely coil the cord.
- A loose fit between the outlet and plug may cause overheating and a distortion of the adapter. Contact a qualified electrician to replace a loose or worn outlet.
- If the power adapter is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 15)
- Your fan should **only** be used with
- **220–240V, 50/60Hz** electrical systems. **Do not** plug into another type of outlet.

Electromagnetic Fields (EMF)

Your Levoit fan complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

This product contains a coin/button battery.



WARNING: CHEMICAL BURN HAZARD.

KEEP OUT OF REACH OF CHILDREN.

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

- Place sticky tape around both sides of the battery and dispose of it immediately in an outdoor trashcan or recycle safely;
- Store spare batteries securely;
- Empty recycling units on a regular basis;
- Use non-transparent containers to keep the batteries out of view.

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's esophagus (food pipe). The child might:

- Cough, gag or drool a lot;
- Appear to have a stomach upset or a virus;
- Be sick;
- Point to their throat or stomach;
- Have pain in their abdomen, chest, or throat;
- Be tired or lethargic;
- Be quieter or more clingy than usual or otherwise "not themselves";
- Lose their appetite or have a reduced appetite;
- Not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If a child does this, seek immediate medical help.

The lack of clear symptoms is why it is important to be cautious with "flat" or spare button or coin batteries in the home and the products that contain them. Be aware that even used button or coin batteries may cause injury.





This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.



Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below:




This product is RoHS compliant.


This product is in compliance with Directive 2011/65/EU, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.


SAVE THESE INSTRUCTIONS


GETTING TO KNOW YOUR PEDESTAL FAN

A. Fan Head
B. Front Grille
C. Control Panel
D. Pole
E. Base
F. Air Inlet
G. Remote Control
H. Magnetic Dock
I. Fan Blades
J. Knob
K. Power Adapter
L. Adapter Port

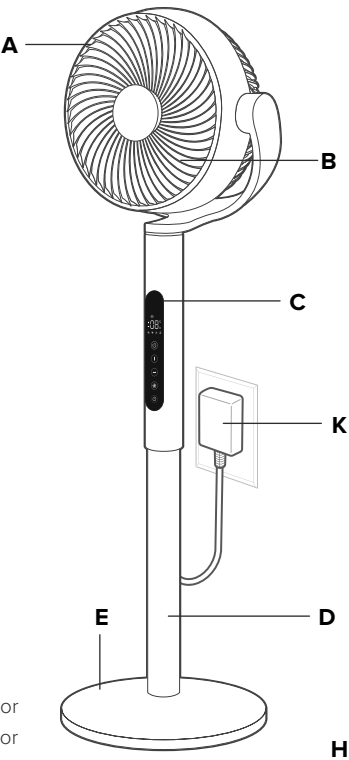

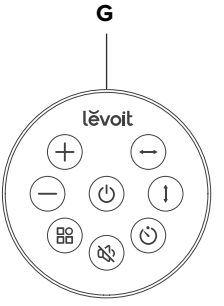

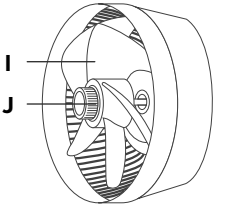

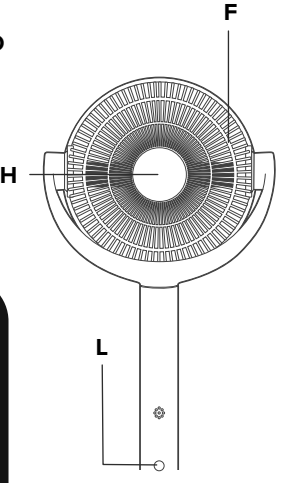



Control Panel

M. Timer Button
N. Up/Down Oscillate Button
O. Left/Right Oscillate Button
P. Fan Speed Button
Q. Power Button

LED Display

R. ECO Mode Indicator
S. Up/Down Oscillate Indicator
T. Left/Right Oscillate Indicator
U. Celsius Indicator
V. Hour Indicator
W. Sleep Mode Indicator
X. Normal Mode Indicator
Y. Turbo Mode Indicator
Z. Sound/Display Off Indicator

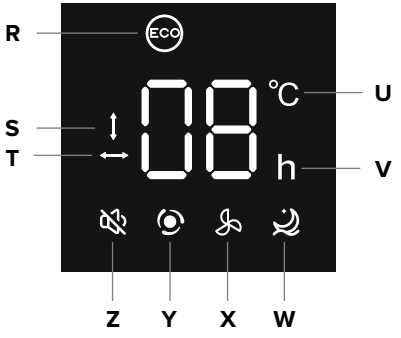

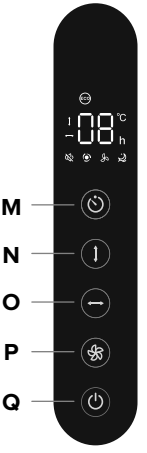

CONTROLS & DISPLAY

Power Button

- Tap to turn the fan on. The default fan speed is 1 (low).
- Tap to turn the fan on/off.
- Press and hold for 15 seconds to reset the fan to default settings.

Timer Button

- Tap to cycle through timer options from 1–12 hours.
- Press and hold to quickly cycle through options in increments of 1 hour.

Fan Speed Button

- Tap to cycle through fan speeds from 1 (low) to 12 (high).
- Press and hold for 3 seconds to turn selection sounds and the display on/off (see **Sound/Display Off**, page 13).

Left/Right Oscillate Button

- Tap to turn left/right oscillation on/off. The default oscillation angle is 90°.
- Press and hold to adjust the angle of left/right oscillation (see **Adjusting Oscillation Angle**, page 13).

Up/Down Oscillate Button

- Tap to turn up/down oscillation on/off. The default oscillation angle is 120°.
- Press and hold to adjust the angle of up/down oscillation (see **Adjusting Oscillation Angle**, page 13).

REMOTE CONTROL

The remote control can be used to control any of the fan's functions from a distance. The remote must be within 5 m / 16 ft of the fan to work.

Note:


- *Remove the plastic tab from the remote control's battery compartment before using.*
- *To replace the battery, see page 13.*

Sound/Display Off Button

- Press to turn selection sounds and display on/off.

Fan Mode Button

- Press to cycle through fan modes: Normal, Turbo, ECO and Sleep (see **Fan Modes**, page 10).

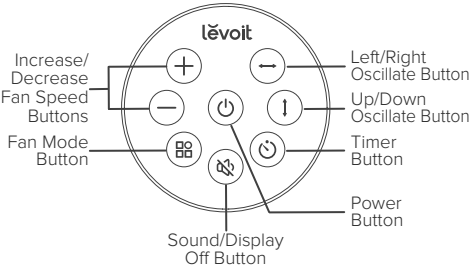

GETTING STARTED

WARNING: Do not use the fan before finishing assembly.

1. Remove all packaging.
2. Rotate the pole clockwise to attach it to the base. Rotate the fan head clockwise onto the pole. ***[Figure 1.1]***

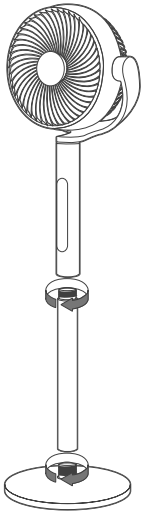


Figure 1.1

3. Optionally, you can attach the fan head directly to the base for a shorter fan. ***[Figure 1.2]***



Figure 1.2

4. Place the fan on a flat, stable surface such as the floor.
5. Insert the power adapter into the port, located at the bottom of the fan. Plug in and turn on. ***[Figure 1.3]***

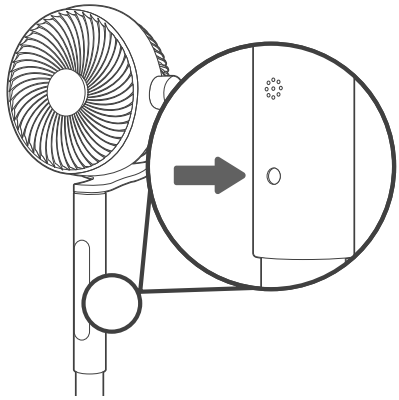


Figure 1.3

6. When using the fan, allow at least 38 cm / 15 inches of clearance from the front of the fan. Keep away from anything that would block air flow, such as curtains. ***[Figure 1.4]***

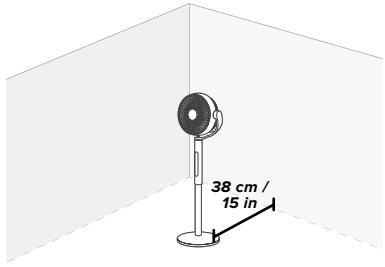


Figure 1.4

PEDESTAL FAN PLACEMENT

- Point the fan towards the ceiling to circulate the air in the room. ***[Figure 2.1]***
- Point the fan forward to circulate cool air when the air conditioner is on. ***[Figure 2.2]***
- Point the fan out a door or window to circulate fresh air from outside. ***[Figure 2.3]***
- Point the fan upwards to circulate warm air when the heater is on. ***[Figure 2.4]***
- Point the fan towards wet laundry to expedite drying. ***[Figure 2.5]***

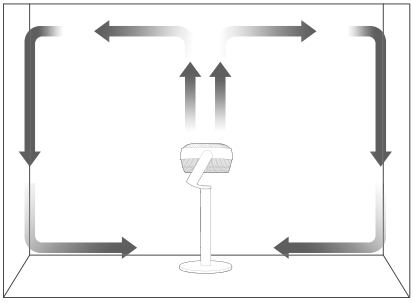


Figure 2.1

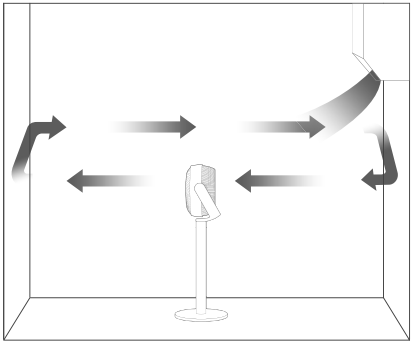


Figure 2.2

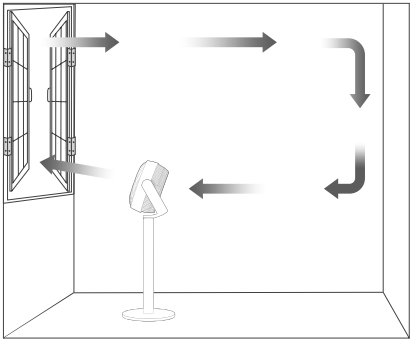


Figure 2.3

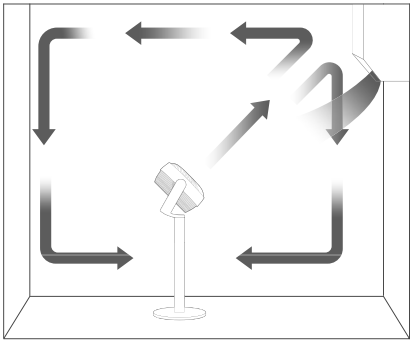


Figure 2.4

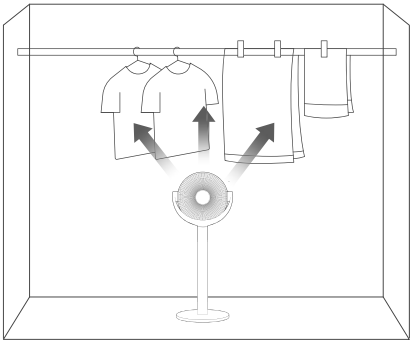


Figure 2.5

USING YOUR PEDESTAL FAN

1. Tap ⏻ to turn on the fan. The display will show the selected fan speed for 5 seconds, then show the current room temperature for 5 seconds.
2. Tap ✿ to change fan speed from 1 (low) to 12 (high).
3. Tap ↕ and/or ↔ to turn on oscillation.
4. Optionally, press ⊞ on the remote to select a different fan mode.

Fan Modes

Press ⊞ on the remote to cycle through fan modes: Normal, Turbo, ECO, and Sleep.

Normal Mode

Use Normal Mode to manually control the fan's speed. Tap ✿ to change fan speed from 1 (low) to 12 (high).

- This is the fan's default mode.
- ✿ will show on the display.

Turbo Mode

Use Turbo Mode with air conditioning to quickly circulate air in your home.

1. Tap ⊞ and select Turbo Mode ◉, ↕, and ↔ will show on the display.
2. The fan automatically starts oscillating and operates at fan speed 12.

Note:

- *If you manually adjust fan speed, the fan will automatically switch to Normal Mode.*
- *You can turn off oscillation by tapping ↕ or ↔.*

ECO Mode

Use ECO Mode for automatic fan speed adjustments according to the room temperature.

1. Tap ⊞ and select ECO Mode. (ECO) will show on the display.
2. The starting fan speed is determined by the current room temperature.

Room Temperature	Fan Speed
≤ 21°C	1
22°C	2
23°C	3
24°C	4
25°C	5
26°C	6
27°C	7
28°C	8
29°C	9
30°C	10
31°C	11
> 31°C	12

Note: *The max ambient working temperature is 40°C.*

3. Optionally, tap ✿ to manually adjust the fan speed while in ECO Mode. The fan will then operate according to the following logic:
   a. If the temperature increases 1°C, the fan speed will increase one level.
   b. If the temperature decreases 1°C, the fan speed will decrease one level.

Sleep Mode

Sleep Mode is optomised to take into account the stages before you sleep, during sleep, and as you wake up.

1. Tap and select Sleep Mode. and will show on the display.
   a. After 5 seconds, the display will turn off and selection sounds will be disabled.
   b. When you select Sleep Mode, the starting fan speed is based off your current fan speed.
2. After 1 hour, the fan speed will decrease as the room temperature stabilises.
   a. If the temperature increases 1°C, the fan speed will increase one level.
   b. If the temperature decreases 1°C, the fan speed will decrease one level.
3. Tap to turn Sleep Mode off.

ADJUSTING OSCILLATION ANGLE

Left/Right Oscillation

1. Press and hold for 3 seconds and will flash.
2. Tap to cycle between 90°, 30°, and 60° oscillation angles.
3. After 5 seconds of no operation, the new oscilation angle is automatically set.

Up/Down Oscillation

1. Press and hold for 3 seconds and will flash.
2. Tap to cycle between 120° (displayed as 99°), 30°, 60°, and 90° oscillation angles.
3. After 5 seconds of of no operation, the new oscilation angle is automatically set.

Sound & Display Off

1. Press and hold for 3 seconds (or press on the remote) to turn selection sounds and the display off.
2. After 5 seconds of no operation, the display will automatically turn off and selection sounds will be disabled.
3. Tap any button to temporarily turn the display back on. If you don't tap another button, the display will turn back off after 5 seconds.
4. Press and hold for 3 seconds (or press on the remote) to turn selection sounds and the display back on.

Standby Mode

- The fan is in Standby Mode when it is turned off, but plugged in.
- Tap to turn the fan on.

Memory Function

- When the fan is in standby, it will remember all its previous settings, except timer.
- When the fan is turned off and unplugged, it will remember all its previous settings, except for timer and oscillation.

CARE & MAINTENANCE

Cleaning the Fan

We recommend regularly cleaning the fan because excessive dust will accumulate on the front grille, air inlet, and fan blades. This may cause the fan performance to decrease, as well as increase noise and vibration.

1. Unplug before cleaning.
2. Wipe the outside of the fan with a soft, dry cloth. If necessary, wipe with a damp cloth, then immediately dry.
3. Use a vacuum, duster, or compressed air to remove dust.
4. For deeper cleaning, use a screwdriver to remove the screw from under the front grille. Rotate the front grille anticlockwise and remove it. ***[Figure 3.1]***
5. Rotate the knob clockwise to remove it. Pull the fan blades out. ***[Figure 3.2]***
6. Remove the screw at the bottom of the air inlet. Rotate the air inlet anticlockwise to remove it. ***[Figure 3.3]***
7. Wipe the parts down with a damp cloth, then immediately dry. If necessary, use mild detergent to remove dirt. ***[Figure 3.4]***

Notes:

- *A phillips screwdriver is required.* ***Do not*** *use an electric drill.*
- *Make sure the fan is turned off before removing parts.*
- ***Do not*** *clean with abrasive chemicals or flammable cleaning agents.*
- ***Do not*** *immerse the fan in water or allow water to drip into the motor housing.*

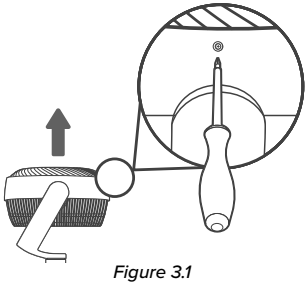


Figure 3.1

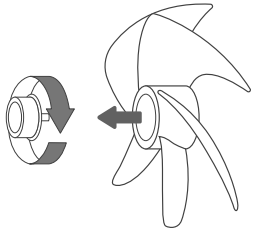


Figure 3.2

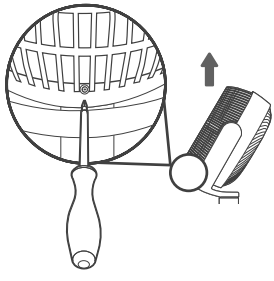


Figure 3.3

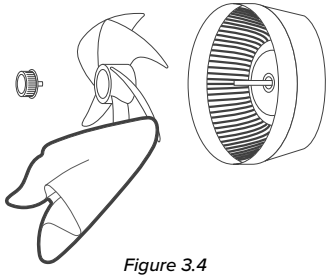


Figure 3.4

Replacing the Remote Control Battery

1. Press the tab and pull to remove the battery compartment. ***[Figure 4.1]***
2. Remove the old battery. ***[Figure 4.2]***
3. Replace with a new 3V CR2025 battery. Make sure the polarities match.
4. Replace the battery compartment. ***[Figure 4.3]***

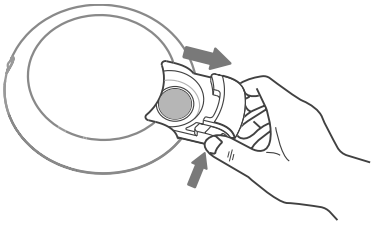


Figure 4.1

Storage

If not using the fan for an extended period of time, cover the fan and store in a cool, dry place to avoid moisture damage.

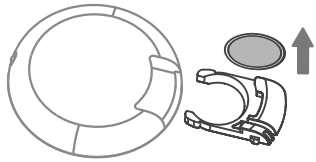


Figure 4.2

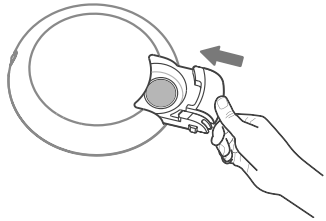


Figure 4.3

TROUBLESHOOTING

Problem	Possible Solution
Fan will not turn on or respond to button controls.	Plug in the fan.
	Check to see if the power cord is damaged. If so, stop using the fan and contact **Customer Support** (see page 15).
	Plug the fan into a different outlet.
	Fan may be malfunctioning. Contact **Customer Support** (see page 15).
Fan makes an unusual noise while the fan is on.	Make sure the fan is operating on a hard, flat, level surface.
	Fan may be damaged, or a foreign object may be inside. Stop using the fan and contact **Customer Support** (see page 15). **Do not** try to repair the fan.
Fan randomly turns off.	Fan is malfunctioning. Stop using the fan and contact **Customer Support** (see page 15).

If your problem is not listed, please contact **Customer Support** (see page 15).

WARRANTY INFORMATION

Product Name	Pedestal Air Circulator Fan
Model	LPF-R432-WUK
Date of Purchase	
Order ID	

LEVOIT Limited Product Warranty

Two (2) Year* Limited Consumer Product Warranty

VESYNC (UK) LIMITED ("VESYNC") warrants that the product shall be free from defects in material and workmanship for a period of 2 years from the date of original purchase ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g., in the intended environment and under normal circumstances). ***This warranty does not limit your rights as may be mandated or granted by the applicable national or regional consumer protection laws in your region, in which cases the Limited Warranty Period is extended pursuant to the applicable requirements.**

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, VESYNC will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online LEVOIT store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.
Be Aware of Unauthorized Dealers or Sellers
This limited warranty does not extend to products purchased from unauthorized dealers or sellers. VESYNC's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to VESYNC's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from VESYNC or its authorized dealers.
If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support Team.

What's Not Covered?

• Normal wear and tear, including normal wearing parts, or damages due to misuse.
• If the proof-of-purchase has been altered in any way or is made illegible.
• If the model number, serial number or production date code on the product has been altered, removed or made illegible.
• If the product has been modified from its original condition.
• If the product has not been used in accordance with directions and instructions in the user manual.
• Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
• Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
• Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than VESYNC.
• Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
• If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher¬ safe).
• Incidental and consequential damages.
• Damages or defects exceeding the cost of the product.
Claiming Your Limited Warranty Service in 5 Simple Steps:
1. Make sure your product is within the specified limited warranty period.
2.Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. DO NOT dispose of your product before contacting us.
4. Contact our Customer Support Team.
5. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES VESYNC'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF VESYNC CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, VESYNC CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM VESYNC CORPORATION "AS IS" AND VESYNC CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES

OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL VESYNC CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:
(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM VESYNC CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR
(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF VESYNC CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.
AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.
EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, VESYNC CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

Other Rights You May Have

SOME JURISDICTIONS DO NOT ALLOW FOR:
(1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/ OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.
ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

Changes to this policy
We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:
VESYNC (UK) LIMITED
Unit G2 Havenside Industrial Estate, Fishtoft Road, Boston
England, PE21 0AH

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our local distributor or our helpful Customer Support Team.

Email:
support.uk@levoit.com

*Please have your order invoice PDF or screenshot(s) ready before contacting Customer Support.

